

PNEUMATICO SCHEME (FULL MACHINE) OIL

C1	DOWN NOZZLES	RO	GENERAL FILTER REGULATOR+ENGAGING VALVE
C2	CLOSE THE NOZZLES	R2	REGULATOR FOR NOZZLES CLOSING
C3	PLATEAU CAPSULES	R6	REGULATOR FOR CAP SENSING
C4	RELEASE CAP	R7	REGULATOR FOR AIR BLOWING ON CAP'S PIPE
C6	SENSE CAP	RY	REGULATOR FOR BOTTLES SUPPORT
C9	DOWN ROLLER HEAD OR THERMAL HEAD		
C10	SUPPORT BLOCKING BOTTLES		
YA	SLIDING CAPSULE	S1	AIR BLOW ON CAPS SUPPLIER
YB	BLOW CAPSULES	S2	AIR BLOW TO SPIN CAPSULES
YC	ROTATION CAPSULE		
YD	PUSH CAPSULE		
YE	ROLLER HEAD OR THERMAL HEAD		
Y1	DOWNING NOZZLES		
Y2	CLOSING NOZZLES		
Y3	PLATEAU CAPSULES		
Y4	RELEASING CAP		
Y6	SENSING CAP		
Y9	DOWNING CAPPER		
Y	SUPPORT BLOCKING BOTTLES		
Y22	PICK UP P&P		
Y23	LIFT UP P&P		
Y24	MOVE ON P&P		



